Your Guide to BASE lutea

BASE

Legal Information

Copyright © 2010 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE CORPORATION.

Trademarks

BASE and the BASE logo are trademarks of BASE.

The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE CORPORATION is under license. Other trademarks and trade names are the property of their respective owners. microSD logo is a trade mark of the SD Card Association.

Version No.: R1.0
Edition Time: 201008

Notice

The information contained in this manual is subject to change without notice. This handbook has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to chapter „For Your Safety“ to be sure to use your phone properly and safely.

Disclaimer

All content and services accessible through this device belong to third parties and are protected by copyright, patents, trademarks and/or other intellectual property laws. Such content and services are provided solely for your personal use and not for commercial use. You may not use them without the expressed permission of the content owner or service provider. Although this does not limit the foregoing, unless expressly authorized by the content owner or service provider concerned, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, distribute or exploit in any manner or medium any content or services displayed through this device.

THE CONTENT AND SERVICES OF THIRD PARTIES ARE PROVIDED „AS IS“. TO THE FULLEST EXTENT PERMITTED BY LOCAL LAW, ZTE CORPORATION DOES NOT WARRANT THE CONTENT OR SERVICES PROVIDED, EITHER EXPRESSED OR IMPLIED, FOR ANY PURPOSE. ZTE CORPORATION EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ZTE CORPORATION DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF THE CONTENT OR SERVICES PROVIDED THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES SHALL ZTE CORPORATION BE LIABLE, INCLUDING NEGLIGENCE, WHETHER UNDER CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING FROM, OR IN CONNECTION WITH, THE INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ZTE CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. TO THE EXTENT SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF LEGAL RIGHTS OF THE CONSUMER, IT IS POSSIBLE THAT THESE EXCLUSIONS AND LIMITATIONS DO NOT APPLY.

The services of third parties may be suspended or discontinued at any time, and ZTE CORPORATION does not guarantee that any content or service will remain available for a certain period. The content and services are provided by others via networks and transmission equipment outside the control of ZTE CORPORATION. Without limiting the generality of this disclaimer, ZTE CORPORATION expressly disclaims liability for any interruption or suspension of any content or service provided through this device. ZTE CORPORATION is not responsible for customer service related to content and services. Any question or request for service on the content or services must be addressed directly to the respective content and services providers.

Downloading content without permission may infringe copyright and/or intellectual property right of the artist. ZTE CORPORATION shall not be held liable for offenses committed on copyright and intellectual property right resulting from downloading by the user.

Contents

For Your Safety **19**
- **General Safety** **19**
- **Radio Frequency (RF) Exposure** **21**
  - General Statement on RF Energy 21
  - Specific Absorption Rate (SAR) 21
  - Body-Worn Operation 22
  - Limiting Exposure to Radio Frequency (RF) Fields 23
  - Regulatory Information 23
- **Distraction** **24**
  - Driving 24
  - Operating Machinery 24
- **Product Handling** **24**
  - General Statement on Handling and Use 24
  - Small Children 26
  - Demagnetization 26
  - Electrostatic Discharge (ESD) 26
  - Antenna 27
  - Normal Use Position 27
  - Air Bags 28
  - Seizures and Blackouts 28
  - Repetitive Motion Injuries 29
  - Emergency Calls 29
  - Loud Noise 29
  - Phone Heating 29
- **Electrical Safety** **30**
  - Accessories 30
  - Connection to a Car 30
  - Faulty and Damaged Products 30

Interference **31**
General Statement on Interface 31
Pacemakers 31
Hearing Aids 31
Medical Devices 32
Hospitals 32
Aircraft 32
Interference in Cars 32
Explosive Environments **33**
Petrol Stations and Explosive Atmospheres 33
Blasting Caps and Areas 33
Getting Started **34**
Overview **35**
Keys Explained **37**
Starting Up **38**
Installing the SIM/microSD Card and Battery 38
Removing the Battery and SIM/microSD Card 43
Charging the Battery 44
Switching Your Phone On/Off **45**
Switching to Sleep Mode 46
Waking Up Your Phone 47
Getting Around BASE lutea **47**
Touch Control 47
Home Screen 48
Status and Notification Icons 52
Applications and Settings Preview 54
Phone Calls **60**
How to Make Calls **60**
Calling from the Dialer 60
Calling from Your Contacts 60

Calling from Your Call History 61
Calling from a Text Message 61
Making Conference Calls 62
Making Emergency Calls 63
Making International Calls 63
How to Receive Calls 64
Answering a Call 64
Rejecting a Call 64
Muting a Call 65
Putting a Call on Hold 65
Turning the Speakerphone On / Off 65
Ending a Call 65
Adjusting Your Call Settings 66
Contacts 67
Importing and Exporting Contacts 68
Creating a Contact 68
Adding a Contact to Favorites 69
Searching for a Contact 70
Editing a Contact 70
Deleting a Contact 70
Entering Text 71
Android Keyboard 72
TouchPal Keyboard 73
Entering Text via On-screen Keyboard 76
Entering Numbers and Symbols 76
Choosing Touch Input Settings 76
TouchPal's Settings 76
Android Keyboard Settings 77
User Dictionary 78
Messaging 78

Sending a Text Message 78
Sending an MMS 79
Managing Messages and Their "Threads" 80
Replying to a Message 81
Deleting a Message Thread 81
Message Settings 81
Emailing 83
Creating an Email Account 83
Writing and Sending Emails 85
Replying to and Forwarding Emails 86
Choosing Your Email Settings 86
Getting Connected to the Internet 88
Adding a New GPRS/3G/EDGE Connection 88
Turning on Wi-Fi 89
Adding a Wi-Fi Network 90
Checking the Wi-Fi Network Status 90
Browsing the Internet 91
Browsing Options 92
Browser Settings 93
Opening Links in Web Pages 95
Downloading Apps from the Web 96
Using Bookmarks 96
Editing a Bookmark 96
Deleting a Bookmark 96
Going Wireless with Bluetooth® 97
Turning Bluetooth On/Off 97
Making Your Phone Visible 98
Changing Your Phone's Name 98
Hooking up with Another Bluetooth Device 99
Making the Most of Multimedia 100

Taking Pictures with Your Camera **100**
Adjusting Camera Settings 100
Shooting Video with Your Camcorder **102**
Adjusting Your Video Settings 102
Listening to Your FM Radio **103**
Playing Your Music **104**
Creating Playlists 106
Managing Playlists 106
Setting a Song as Ringtone 107
Playing Your Videos **107**
Opening Your Gallery **109**
Making Memorable Memos **110**
Using Your Google™ Applications **111**
Google Mail **111**
Sorting Out Your Phone Settings **112**
Setting Time and Date **112**
Changing Display Settings **113**
Adjusting Screen Brightness 113
Adjusting Screen Timeout 113
Switching Screen Orientation Automatically 114
Showing an Animation when Opening/Closing Windows 114
Sound Settings **114**
Choosing Your Ringtone 114
Setting the Default Notification Ringtone 115
Switching Your Phone to Silent 115
Switching to Vibrate 116
"Haptic" (Touch) Keypad Feedback 116
Adjusting Ringer Volume 116
Adjusting Media Volume 117
Turning on Touch Tones 117

Turning on Selection Tones 117
Turning on SD Card Audible Alerts 117
Language Settings 118
Mobile Network Services 118
Getting Data Services while Abroad 118
Disabling Data Services 119
Switching Network Modes 119
Switching Networks 119
Setting Access Point Names 120
Security Settings 122
Protecting Your Phone with a Screen Unlock Pattern 122
Protecting Your SIM with a PIN 124
Setting up Credential Storage 125
Managing Your Memory Card 126
Checking Memory Card Space 126
"Unmounting" Your Memory Card 126
Formatting Your Memory Card 126
Managing Phone Memory 127
Checking Available Storage Space 127
Privacy: Reset to Factory Settings 127
Managing Applications and Their Settings 128
Viewing Your Phone's Applications 128
Allowing Installation of Non-market Applications 128
How to Install an Application 128
Removing an Application 129
Managing Other Settings 130
Search Settings 130
Speech Synthesis 130
Other Applications 131
Alarms 132

Docs To Go 132
Note Pad 132
Calculator 132
Calendar 133
SIM Toolkit 133
Task Manager 133
Stopwatch 133
Specifications 134
Declaration of RoHS Compliance 135
Disposal of Your Old Appliance 136
EC Declaration of Conformity 137

For Your Safety

General Safety

	Don't make or receive hand-held calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contact with anything magnetic.

	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contact with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

Radio Frequency (RF) Exposure

General Statement on RF Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.934 W/kg.* As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.**

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

* The tests are carried out in accordance with IEC standard PT62209-1.
** Please see "Body-Worn operation".

Body-Worn Operation

Important safety information regarding radio frequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 15 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting Exposure to Radio Frequency (RF) Fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page http://www.who.int/peh-emf (WHO Fact sheet 193: June 2000).

Regulatory Information

The following approvals and notices apply in specific regions as noted.

Please find the section "Declaration of RoHS Compliance" and CE DOC in the end of this manual.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum –5 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

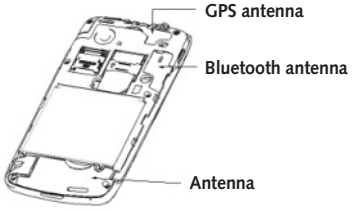

Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

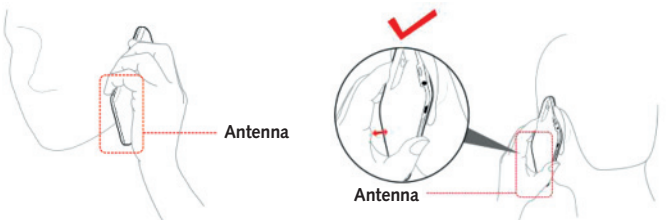

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures and Blackouts

The phone can produce a bright or flashing light.

Repetitive Motion Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel must service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

Interference

General Statement on Interface

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a "flight mode", this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Petrol Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Getting Started

Thanks for choosing the BASE lutea from BASE. If you'd like your new phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions they show that matter.

Get in touch with your phone

Another thing you'll notice is that we talk about "tapping" a lot. That's because your BASE lutea has a touch screen, which means a simple tap with your finger can both select and open a file. Indeed, you can "slide" switches on the screen, "hold" files until a list of shortcuts pops up, casually "flick" from page to page, "drag" items into the bin with a well-aimed index finger, or even "pinch" web pages or images to zoom in or zoom out. It's a joy to use.

And that's exactly what this guide is about: making sure the relationship with your new phone is a pleasure from day one. So please read on and enjoy …

Overview

First, find out where everything is.

Keys Explained

Next, see what everything does …

Key	Function
Power Key	• Hold to select phone modes: Silent, Vibration, Airplane or Power off • Press to switch your phone to Sleep mode • Press to wake up your phone
Home Key	• Press to return to the Home Screen from any application or screen • Hold to see recently used applications
Menu Key	Press to get the options on the current screen
Back Key	Press to go to the previous screen
Volume Keys	Press higher end of the key to turn the volume up and lower end of the key to turn it down

Starting Up

Now you're ready to get your new phone working.

Here's how …

Installing the SIM/microSD Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.

1. Remove the back cover.

2. Hold the SIM with the cut corner oriented as shown and slip it into the card holder.

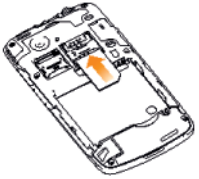

3. Open the microSD card holder, hold your microSD card by the cut corner end and slide it in.

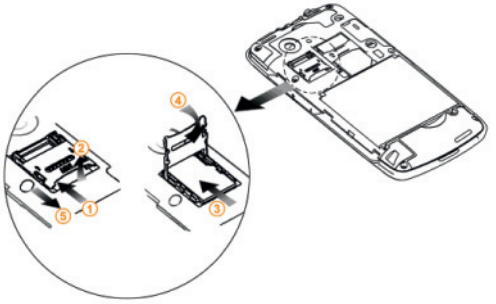

4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.

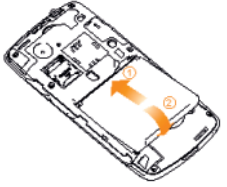

5. Press the cover gently back into place until you hear a click.

Removing the Battery and SIM/microSD Card

1. Make sure that your mobile phone is off.
2. Remove the back cover.
3. Lift the battery up and out.

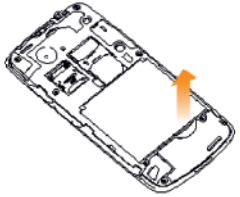

4. Slide the SIM out.
5. Open the microSD card holder, sliding it down gently and remove the microSD card.

Charging the Battery

When you first get your new phone you'll need to charge the battery like this:

1. Connect the adapter to the charger jack.
2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

How much charge have you got?

If the battery is low, there will be a pop-up message on the screen and the indicator light will be red. As you charge your phone, the indicator light will change according to the battery level:

Indicator color	Battery level
Red	Less than 5 % of the total battery level
Green	More than 90% of the total battery level

If the phone is on, you'll see the charging icon appear on the status bar. As soon as charging is completed, the icon appears on the status bar.

Switching Your Phone On/Off

1. Make sure the SIM is in your device and the battery is charged.
2. Hold **Power Key** to switch on your phone.
3. To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK.**

Switching Your Phone On/Off

1. Make sure the SIM is in your device and the battery is charged.

2. Hold **Power Key** to switch on your phone.

3. To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time, which you can set in **Settings > Sound & display > Screen timeout.**

Press **Power Key** to switch to Sleep Mode.

Waking Up Your Phone

1. Press **Power Key** to activate your screen display.

2. Drag the icon to the right.

NOTE: If you have set an "unlock pattern" for your phone (see page 122), you'll need to draw the pattern to unlock your screen.

Getting Around BASE lutea

Touch Control

You can use finger gestures to control your phone. The controls on your touch screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.

2. Keep your finger on an item to see the available options.

3. Flick the screen to scroll up, down, left or right.

4. Point, drag and drop to move particular items across the screen – into files etc.

5. Pinch with two fingers to zoom in/out a web page or an image.

NOTE: You can view the phone screen in portrait or landscape simply by holding it upright or turning it on its side.

Home Screen

You choose what is shown on your Home Screen. Just add or remove stuff to make it your own.

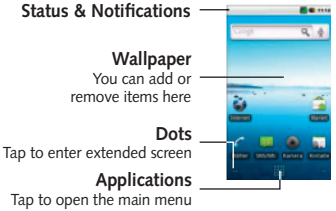

Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right to see the extended Home Screen.

Choosing Your Wallpaper

1. Tap **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper.**
3. Choose the screen you want the wallpaper to be applied to, **Home** or **Lock screen.** Live wallpapers can not be used for lock screen.
4. Select the wallpaper you want to use from **Gallery, Live wallpapers,** or **Wallpapers.**
5. Tap **Save** or **Set wallpaper.**

Adding Things to Your Home Screen

1. Tap **Home Key** to return to the Home Screen.
2. Slide left or right to find an extended Home Screen where there is space to add an item.
3. Tap **Menu Key** and select .

   You can also tap and hold the blank area of the Home Screen to get the **Add to Home Screen** menu.
4. Select an item type and the item you want to add to the Home Screen.

Removing Things from Your Home Screen

1. Tap **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the icon appears on the screen.
3. Drag the item to .

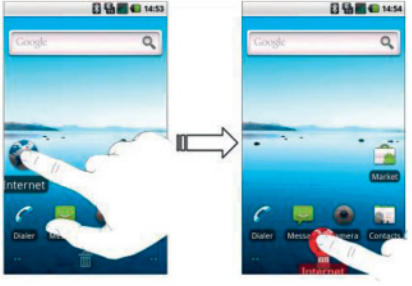

Status and Notification Icons

Your BASE lutea will tell you exactly what's going on by showing you simple icons. Here's what they mean …

	GPRS connected		No signal
	GPRS in use		Signal strength
	EDGE connected		Roaming
	EDGE in use		Phone speaker off
	3G connected		Phone microphone off
	3G in use		No SIM installed
	USB connected		GPS connected
	Battery very low		Connected to a Wi-Fi network
	Battery low		Alarm set
	Battery full		Wired microphone headset
	Battery charging		Bluetooth on
	Vibrate mode		Speaker on
	Airplane mode		Problem with SMS/MMS delivery

	New mail		New instant message
	New SMS/MMS		Upcoming event
	New WAP push message		Song is playing
	New voicemail		Downloading data
	Missed call		Content downloaded
	Call in progress		Sending data
	Call on hold		More (not displayed) notifications
	Call forwarding		New SMS & wap push message

Using the Notification Panel

Flick the status bar downwards to open the Notification Panel, where you can see your calendar events, new messages, and current settings – such as call forwarding or call status. From here you can also open messages, reminders, etc.

TIP: You can also open the Notification Panel from the Home Screen by tapping **Menu Key > Notifications.**

Applications and Settings Preview

Programs Preview

Your BASE lutea has lots of functions. Tap to see the following:

Applications	Benefit
Alarm	Set alarms
Barcode Scanner	Use the camera to read barcodes and look for product information
Calculator	Do basic calculation
Calendar	Schedule appointments and events
Call log	Check incoming, outgoing, and missed call history
Camcorder	Shoot video clips
Camera	Take some great pictures
Contacts	Keep contact details of friends and colleagues
Dialer	Dial a number
Docs To Go	View your documents
Email	Send and receive emails
Filer	Manage files on your microSD card
FM Radio	Search, listen to and save radio channels
Gallery	Manage multimedia files

Applications	Benefit
Google Mail	Enables you to access your Gmail account and check your email on your mobile phone
Internet	Browse the Internet
Maps	Track your current location, view real-time traffic, and receive detailed directions to your destination
Market	Access useful applications and fun games to download
Messages	Open the messages screen, where you can send and receive SMS and MMS messages
Music	Browse your audio files and listen to them in music player
Note pad	Create text notes
RoadSync	Get your corporate emails, calendars, contacts, tasks, and attachments on the go
Settings	Adjust phone settings
SIM Toolkit	Only appears on the screen if your SIM provides this function. Please contact BASE for more information
Sound Recorder	Capture audio clips
Stopwatch	Measure exactly how long it takes to do something

Applications	Benefit
Talk	Use Google Talk
Task Manager	Manage all the programs running on your phone
Videos	Browse and watch video files
YouTube	Watch YouTube videos

Checking Your Settings

To change or view your phone's settings, tap **Home Key >** **> Settings.**

Or from the Home Screen tap **Menu Key > Settings.**

Wireless & networks	Configure and manage wireless connections, such as Wi-Fi, Bluetooth, mobile networks, and virtual private networks. You can also select **Airplane mode** from here.
Call settings	Set up fixed dialing numbers, voicemail, call barring, call forwarding, call waiting, caller ID, etc.

Sound & display	Set sound settings, such as ringtones and notifications. Or display settings, such as screen brightness
Location & security	Create your screen unlock pattern, set the SIM lock, or manage the phone's credential storage. You can also select the sources to use when determining locations from **My Location**
Applications	Manage your apps and install new ones
USB settings	Configure PC connection and USB charging settings
Accounts & sync	Manage your accounts and configure synchronisation settings
Privacy	Configure privacy settings, such as location, back-up settings, and personal data
SD card, USB mass storage & phone storage	Check available memory on the external card and the internal phone storage
Search	Set the search options
Language & keyboard	Set operating system language and region, plus text input options
Accessibility	Choose accessibility options

Text-to-speech	If you have installed a text-to-speech (voice data) application, you can choose the settings.
Date & time	Set the date, time, time zone, and date/time format.
About phone	View phone status, battery level, and legal information.

Opening Recently Used Applications

1. Hold **Home Key** from any screen until the following recently used applications screen appears.

2. Tap the application you want to open.

Phone Calls

How to Make Calls

There are many ways to make a call with your BASE lutea. And they're all easy to do.

Calling from the Dialer

1. Tap **> Dialer** from the Home Screen.
2. Enter the phone number or the contact name you want to call.

   If you make a mistake, tap to erase a wrong entry, or hold this key to clear all digits. Your phone automatically lists the matching contacts. You can tap to hide the keypad and to see if there are more matching numbers or contacts.
3. Tap Call.

Calling from Your Contacts

1. Tap **Home Key > > Contacts.**
2. Slide your finger to scroll the contacts list and tap the contact you want to call.

   You can search for a contact by tapping **Menu Key > Search.**

3. Tap .

Calling from Your Call History

1. Tap **Home Key > > Call log.**

   NOTE: You can also open Call log by tapping the **Call log** tab from the Contacts Screen, or by tapping from **Dialer.**
2. Tap next to the number you want to call.

Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.

1. Tap **Home Key > > Messages** and tap the message that contains the phone number you want to call.
2. Tap the number.

3. Select the number and tap Call.

Making Conference Calls

Whether you can make a conference call depends on your network and/or your tariff. Usually a quick call will make it possible. Please call BASE to find out more.

You can make a phone call between yourself and two or more other people. And this is how you do it:

1. Call the number of one of the people you want to join the conference call.
2. While you are connected to that first number, tap **Menu Key > Add call.**
3. Call the number of someone else you want to join in.
4. While you are connected to the second number, tap **Menu Key > Merge calls.**
5. To add another party, tap **Menu Key > Add call.**
6. Dial the number, and when connected, tap **Menu Key > Merge calls.**

7. Continue as above until you have everybody you want on the call.

Making Emergency Calls

1. Enter the emergency number for your location from the dialer.
2. Tap Call.

TIP: It's possible to dial emergency numbers when your SIM is not inserted. Please call BASE to find out more information. For instance, what emergency numbers are supported.

Making International Calls

1. Hold 0+ from the dialer to enter "+".
2. Enter the full phone number.

   For example: +49 123-123 45 67 in the following format:
   + country code / area code / phone number.
3. Tap Call.

Whether you can make international calls depends on network status and/or your tariff. Usually a quick call will make it possible. Please call BASE to find out more.

How to Receive Calls

Answering a Call

Drag to the right to answer the call.

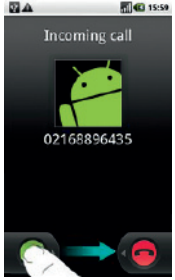

Rejecting a Call

Drag to the left to reject the call.

Muting a Call

During a call, you can mute your microphone so that the person you are speaking to cannot hear you, but you can still hear them:

Tap **Menu Key > Mute** to turn your microphone off. The mute icon will appear on the screen. To turn your microphone back on, tap **Menu Key > Mute** again.

Putting a Call on Hold

During a call, you can put it on hold by tapping **Menu Key > Hold.** The icon will appear on the screen.

TIP: If you accept an incoming call while you're on another call, the first call automatically goes on hold. Just tap **Menu Key > Swap calls** to switch between the two callers.

Turning the Speakerphone On/Off

Drag to the left during a call to turn the speakerphone on. The icon will appear in the status bar. Drag to the left to turn it off.

Ending a Call

Drag to the right to finish a call.

Adjusting Your Call Settings

From the Home Screen, you can open the call settings menu by going from **Menu Key > Settings > Call settings.** This is what the settings do:

Fixed dialing numbers	Restrict outgoing calls to a fixed set of numbers. To do this you must know your SIM's PIN2 code		
Voicemail service	Select a voicemail service provider		
Voicemail settings	Specify a voicemail number		
DTMF tones	Set the length of Dual-Tone Multi-Frequency (DTMF) tones		
GSM/WCDMA call settings	Call forwarding	Forward your incoming calls to a different number. And choose when to forward: **always forward; forward when busy; forward when unanswered,** or **forward when unreachable.**	
	Additional settings	Caller ID	Choose whether people you call can see your number
		Call waiting	See new incoming calls while you're on another call
Call barring settings	Forbid certain types of calls		

Contacts

You can save contacts to your phone memory or your SIM. If you store the information on the SIM, you can just attach a name and number. But if you store their information on the phone memory, you can add emails, postal addresses, pictures, nicknames, web sites, etc.

To see your contacts, tap **Home Key >** **> Contacts.**

There are four tabs on the Contacts Screen: **Call log, Contacts, Favorites,** and **Groups.**

Importing and Exporting Contacts

You can import/export contacts from/to your SIM card (or microSD card). First, let's do it for the SIM …

1. Tap **Menu Key > Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. Your BASE lutea will automatically read the contacts.
3. Select the contacts you want to import/export. Or, just tap **Menu Key > Select all.**
4. Tap **Done.**

And this is how you import/export contacts from/to a microSD card …

1. Tap **Menu Key > Import/Export** from the Contacts Screen.
2. Choose to import or export contacts. If you want to import contacts from the microSD card, you should have vCard files saved in the microSD card. If there's more than one vCard file, you need to select the vCard file and tap **OK.**

Creating a Contact

1. Tap **Menu Key > New contact** from the Contacts Screen.
2. Select where you want to save your contact.

3. Enter their name and phone number(s), email addresses, chat addresses, postal addresses, etc.
4. Tap **Done** to save the contact.

Adding a Contact to Favorites

1. Tap and hold from the Contacts Screen the contact you want to add to Favorites.
2. Tap **Add to favorites** from the shortcut menu.

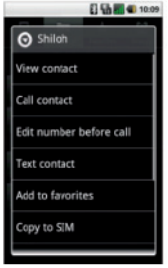

Searching for a Contact

1. Tap **Menu Key > Search** from the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.

Editing a Contact

1. Tap the contact you want to edit from the Contacts Screen.
2. Press **Menu Key > Edit contact.**
3. Edit the contact and tap **Done.**

TIP: You can also edit a contact by holding it in the Contacts Screen and selecting **Edit contact** from the pop-up shortcut menu.

Deleting a Contact

1. Select the contact you want to delete from the Contacts Screen.
2. Press **Menu Key > Delete contact**
3. Tap **OK.**

Entering Text

Two fingers, five fingers or even ten fingers – everyone has a different way (and ability) when it comes to typing. The BASE lutea recognizes that fact by offering a choice of keyboards. You choose what suits …

TIP: The keyboard automatically appears on the screen when you enter a field that needs text. You can hide it by holding **Menu Key** or pressing **Back Key.**

Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. To make it even more like a normal keyboard, turn the phone sideways and the screen will change from portrait to landscape.

To use the landscape keyboard, just tick the **Orientation** check box in **Settings > Sound & display.** (The landscape QWERTY keyboard is not supported in all applications.)

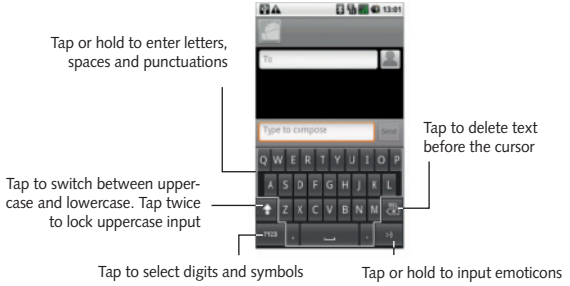
Tap or hold to enter letters, spaces and punctuations
Tap to delete text before the cursor
Tap to switch between upper-case and lowercase. Tap twice to lock uppercase input
Tap to select digits and symbols
Tap or hold to input emoticons

TouchPal Keyboard

Select one of the three TouchPal keyboard layouts:

- Full QWERTY

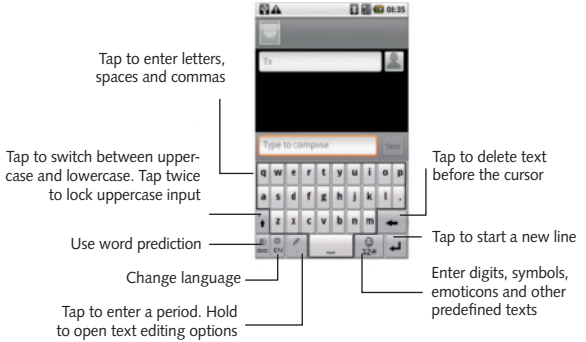
Tap to enter letters, spaces and commas
Tap to switch between upper-case and lowercase. Tap twice to lock uppercase input
Tap to delete text before the cursor
Use word prediction
Tap to start a new line
Change language
Enter digits, symbols, emoticons and other predefined texts
Tap to enter a period. Hold to open text editing options

- 12-Key PhonePad

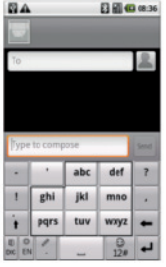

Tap a key repeatedly until the desired letter appears

- CooTek T+

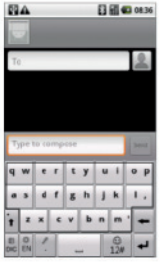

Tap to enter the left letter on the key; tap and flick right to enter the right letter/symbol on the key

Entering Text via On-screen Keyboard

1. Enter a field that needs text or numbers.
2. Tap or hold the letters on the keyboard to enter your text.

Entering Numbers and Symbols

1. Enter a field that needs text or numbers.
2. Tap / to open the symbol panel.
3. Select the numbers and symbols.

Choosing Touch Input Settings

Choose the touch input settings by tapping **Menu Key > Settings > Language & keyboard** from the Home Screen.

In the **Text settings** section, you can choose the settings for Android keyboard, TouchPal, and user dictionary.

TouchPal's Settings

You can tick the check boxes to enable …

- word prediction

- key press sound
- key press vibration
- mixed language input
- swipe to switch layout
- next word prediction
- mistyping correction
- slide-down symbol input
- relevant words suggestion

Or select language, layout in portrait mode and landscape mode.

Android Keyboard Settings

You can tick the check boxes to enable …

- vibration on keypress
- sound on keypress
- auto-capitalization of the first letter in each sentence

User Dictionary

You can add words to your dictionary by pressing **Menu Key > Add.**

Messaging

Your SMS (text message) and MMS (multimedia messaging service) files are located in Messages (**> Messages).**

From **Messages**, you can receive and send an SMS or MMS.

When you receive a new message, you can open it from the Notification Panel, or from the Messages Screen. Simply tap on the new message to read it.

Your phone will tell you when a message arrives by showing the icon / / in the status bar.

Sending a Text Message

1. Tap **Home Key > > Messages.**
2. Tap **New message.**
3. Tap the **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts,** and then select their name from the list.
4. Tap **Type to compose** and type your message.
5. Tap **Send** to send your text.

Sending an MMS

1. Tap **Home Key > > Message.**
2. Tap **New message.**
3. Tap **To** field and enter the recipient's number. You can also enter the first letters of the recipient's name to display a list of matching names stored in **Contacts,** and then select their name from the list.
4. Tap **Menu Key > Add subject** to enter the subject of your MMS.
5. If needed, tap **Type to compose** and type your message.
6. Tap **Menu Key > Attach** if you want to add an attachment to your MMS.

   Pictures: Select a picture to add to your MMS.

   Capture picture: Take a photo to attach to your MMS.

   Videos: Select a video clip to attach to your MMS.

Capture video: Shoot a video clip and attach to your MMS.

Audio: Select an audio file to attach to your MMS.

Record audio: Record an audio file to attach to your MMS.

Slideshow: Edit a slideshow to attach to your MMS.

7. When you've finished, tap **Send.**

NOTE: Add an attachment to text message and it will be converted into an MMS without you having to do a thing. Likewise if you remove an attachment from an MMS, it'll automatically become a text message.

Managing Messages and Their "Threads"

Text and MMS messages sent to and received from the same contact (or number) are grouped into a message thread in your Messages Screen. That way you can tap a message thread and see the "conversation" you've had with someone – like a chat program. These message threads are arranged according to when you received them, with the latest one on top.

Replying to a Message

1. Tap the message thread you want to reply to from the Messages Screen.
2. Tap **Type to compose** and type your message.
3. Tap **Send.**

Deleting a Message Thread

1. Tap **Menu Key > Delete** threads from the Messages Screen.
2. Select the threads you want to delete and tap **Delete.**
3. Tap **Delete.**

Message Settings

To configure your message settings, tap **Menu Key > Settings** from the Messages Screen.

Storage settings:

- **Delete old messages:** Select to delete old messages when your storage limits are reached.
- **Text message limit:** Set the maximum number of text messages allowed in a single thread.

- **Multimedia message limit:** Set the maximum number of multimedia messages allowed in a single thread.

Text message (SMS) settings:

- **Delivery reports:** Request a delivery report for every text message you send.
- **Manage SIM card messages:** Manage the messages saved to your SIM.
- **Service center:** Enables you to view and edit the service centre number.

Multimedia message (MMS) settings:

- **Delivery reports:** Request a delivery report for every MMS message you send.
- **Read reports:** Request a read report for each MMS message you send.
- **Auto-retrieve:** Automatically retrieve MMS messages.
- **Roaming auto-retrieve:** Automatically retrieve MMS messages when you're roaming.

Notification settings:

- **Notifications:** Show message notifications in the status bar.
- **Select ringtone:** Choose a ringtone for your incoming messages.
- **Vibrate:** Make your phone vibrate when a new message arrives.

Emailing

Go to the Email Screen to set up your email account and exchange emails:

Tap **Home Key >** **> Email.**

Creating an Email Account

1. Enter your email address and password, and then tap **Next** when you enter the Email Screen for the first time.

Your phone will connect to the internet and check incoming and outgoing server settings automatically.

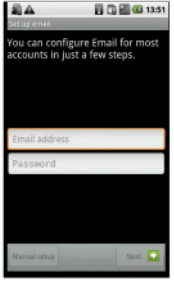

2. Set how often you want your email inbox checked. And choose whether to use this account by default or be told when email arrives. Then tap **Next.**
3. Give your account a name and the name you want recipients to see on all your emails. Tap **Done.**

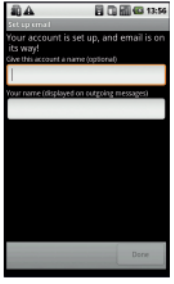
13:56
Set up email
Your account is set up, and email is on its way!
Give this account a name (optional)
Your name (displayed on outgoing messages)
Done

Your phone will start to download emails automatically.

Writing and Sending Emails

After creating your email account, you're ready to write and send emails …

1. From the Email Screen tap **Menu Key > Compose.**
2. Tap **To** and enter the recipient's email address.

   When you enter the address, any matching addresses saved in your Contacts will be displayed. You can choose a recipient from the list.

   You can also tap to select the recipient from Contacts.
3. Enter the subject and the content of your email.
4. Tap **Send.**

TIP: Want to send an email to more than one person? Simply tap **Menu Key > Add Cc/Bcc** and input their email addresses.

Replying to and Forwarding Emails

1. From Email Screen open the email you want to reply to/forward.
2. Tap **Reply** or **Menu Key > Reply/Forward.**

   You can also tap **Reply all** or **Menu Key > Reply all** if you want to include everybody who got the original email. If forwarding, enter the email address(es) your message has to go to.
3. Type your email.
4. Tap **Send.**

Choosing Your Email Settings

Tap the account you want to set from the Email Screen and tap **Menu Key > Account settings.** Here's what you can choose from:

General settings:

- **Account name:** Set your account name.
- **Your name:** Set the name shown on your outgoing emails.
- **Email address:** Set the email address of the account.
- **Use signature:** Choose to use your signature.

- **Signature:** Set your signature.
- **Email check frequency:** Choose how often you want to check for emails.
- **Power-saving mode:** Automatically adjust email check frequency when you have poor signal.
- **Default account:** Automatically choose this email account when you want to send something via an email.

Notification settings:

- **Email notifications:** Alert in status bar when email arrives.
- **Select ringtone:** Choose a special ringtone for incoming emails.
- **Vibrate:** Phone vibrates when email arrives.

Server settings:

- **Incoming settings:** Your incoming email server.
- **Outgoing settings:** Your outgoing email server.

Getting Connected to the Internet

The BASE lutea impressive networking capabilities will get you onto the Internet or a corporate network (intranet) with ease.

You can use default connection settings to connect to the web via your mobile network (GPRS/3G/EDGE), or Wi-Fi.

To get connected via GPRS/3G/EDGE you need a data plan with your service provider. Also if the GPRS/3G/EDGE settings are not pre-configured on your phone, please contact your provider. Changing the settings without talking to your service provider could stop your phone from working.

Adding a New GPRS/3G/EDGE Connection

Before you begin, get the following information from your service provider:

- Access Point Name (APN)
- Your user name and password if needed
- Server IP and the port number if the network uses a proxy server

1. Tap **Home Key >** **> Settings > Wireless & networks > Mobile networks > Access Point Names.**

2. Tap **Menu Key > New APN.**
3. Tap **Name** to enter your APN name (it can be whatever you like).
4. Tap **APN** to enter the APN you want to add.
5. Tap **Proxy** and **Port** to enter the Server IP and port if the network uses a proxy server.
6. Tap and enter **Username** and **Password.** (If there's no username or password, leave them blank.)
7. If needed, tap and enter **APN type.**
8. Tap **Menu Key > Save** to complete.

TIP: To set the APN to default settings, tap **Menu Key > Reset to default.**

Turning on Wi-Fi

Your Wi-Fi provides wireless Internet access over distances of up to 300 feet (100 metres).

1. Tap **Home Key** > **> Settings > Wireless & networks.**
2. Tick the **Wi-Fi** box to turn it on.

Adding a Wi-Fi Network

1. Press start button and tap the button **> Settings > Wireless & networks > Wi-Fi settings.**

   The Wi-Fi network names and security settings (open or secured) that your phone has detected are shown in **Wi-Fi networks.**

2. Tap a network to connect to it.

If you attempt to connect to a secured network, you'll need to give the password to get access.

Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the icon in the status bar.

Or tap **Home Key > > Settings > Wireless & networks > Wi-Fi settings.** Next, tap the wireless network that the phone is currently connected to. You can check the network status from the pop-up window.

Browsing the Internet

You can use your phone to get on the WWW. Your phone automatically creates an EDGE or GPRS/3G connection while you browse web pages. Some of them might not be displayed properly as certain internet programs, such as Flash, are not supported by the default browser.

Tap **Home Key > > Internet.**

There are different ways to open WWW pages …

- Tap the address bar to enter the web site you want to browse. Then tap **Go**.
- Tap **Menu Key > Bookmarks** and select an item to open.
- Go to the Bookmarks Screen to choose an item from the **Most visited** tab / **History** tab.

Browsing Options

- **Refresh: Menu Key > Refresh.**
- **Search: Menu Key > More > Find on page** and enter the search item.
- **Copy: Menu Key > More > Select text** and slide your finger on the page to select the text you want to copy. Your phone automatically copies the selected text to the clipboard.
- **Share pages: Menu Key > More > Share page** to send a page by Email, Google Mail, Messages, or RoadSync Mail.
- **Download/page info: Menu Key > More > Page info/Downloads.**
- **Landscape browser: Home Key > > Settings > Sound & display.** Tick the **Orientation** box and rotate your phone sideways to view the landscape browser screen.
- **Open new browser window: Menu Key > New window.** Then tap the address bar to enter the web site you want to browse.
- **Switch browser windows:** If you have more than one browser windows opened, you can switch between these windows by tapping **Menu Key > Windows.** Then tap the page you want to browse. You can also tap to close a window.

Browser Settings

You can set the browser text size, home page etc. by tapping **Menu Key > More > Settings** from a browser window.

Page content settings:

- Text size
- Default zoom
- Open pages in overview
- Text encoding
- Block pop-up windows
- Load images
- Auto-fit pages
- Landscape-only display
- Enable JavaScript
- Enable plug-ins
- Open in background
- Set home page

Privacy setting:

- **Clear cache:** Delete all cached page contents.
- **Clear history:** Clear the browser navigation history.
- **Accept cookies:** Allow web sites to use cookies.
- **Clear all cookie data:** Clear the browser cookies – deleting all history data.
- **Remember form data:** Remember the data you type in forms for later use.
- **Clear form data:** Clear all the saved form data.
- **Enable location:** Allow sites to request access to your location.
- **Clear location access:** Clear location access for all web sites.

Security settings:

- **Remember passwords:** Save usernames and passwords for web sites.
- **Clear passwords:** Clear saved passwords.
- **Show security warnings:** Warn if there's a problem with a site's security.

Advanced settings:

- **Web site settings:** view advanced settings for individual web sites. (Only available for some web sites.)
- **Reset to default:** Clear all browser data and reset all settings to default.

Opening Links in Web Pages

When you're on a web page with a link to another site, either tap the link to open the page, or hold on the link to open the shortcut menu, giving you these options:

- **Open**
- **Open in new window**
- **Bookmark link**
- **Save link**
- **Share link** (by Email, Google Mail, Messages, or RoadSync Mail)
- **Copy link URL**

Downloading Apps from the Web

If a web page has link to an application you'd like to download, just hold on the link and select **Save link**. The application will be saved to your microSD card.

Using Bookmarks

To bookmark a web page, open it, tap **Menu Key > Bookmarks**, and then **Add/Add bookmark.** Give the bookmark a name and select **OK.**

TIP: To change how you view bookmarks on your phone screen, tap **Menu Key > List view/Thumbnail view.**

Editing a Bookmark

Open a browser window. Tap **Menu Key > Bookmarks.** Select the bookmark you want to edit – holding on it until the shortcut menu pops up – and select **Edit bookmark**. Edit the name or location, and then tap **OK** to save.

Deleting a Bookmark

Open a browser window. Tap **Menu Key > Bookmarks.** Choose the bookmark you want to get rid of by holding on it until the shortcut menu pops up. Then select **Delete bookmark** and tap **OK** to confirm.

Going Wireless with Bluetooth®

Bluetooth gives you short-range wireless communication. Phones or other devices with Bluetooth can exchange information at a maximum range of about 10 metres. They must wirelessly "see" each other before this can be done – which is why guides like this talk about making your phone "visible".

Turning Bluetooth On/Off

1. Tap **Home Key >** **> Settings > Wireless & networks** and tap the box by **Bluetooth** to put a tick in it. The fact that Bluetooth is on will be confirmed by the appearance of in the status bar. If you want to turn Bluetooth off, just clear the **Bluetooth** tick box.

NOTE: The default setting for Bluetooth is off, but you can change that. Turn Bluetooth on, and then turn off your phone. When you power up your phone again, Bluetooth will turn on automatically.

Making Your Phone Visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone visible to them. Here's how …

1. Tap **Home Key >** **> Settings > Wireless & networks > Bluetooth settings.**
2. Select the **Bluetooth** tick box if it isn't already ticked.
3. Tick the **Discoverable** box to make your device visible.

To make your phone "invisible" simply remove the tick from the **Discoverable** box by selecting it again.

Changing Your Phone's Name

When your phone is visible to other Bluetooth devices it will be seen by its name, and you can make that anything you want – like "Ben's BASE lutea".

1. Tap **Home Key >** **> Settings > Wireless & networks > Bluetooth settings.**
2. Select the **Bluetooth** box if it is not already ticked.
3. Tap **Device name.**
4. Enter the name and tap **OK.**

Hooking up with Another Bluetooth Device

Pairing your phone with another phone or device that has Bluetooth means they can exchange information from then on without being visible to each other. However, they must, of course, both have Bluetooth turned on to do this. So this is how you pair up …

1. Tap **Home Key >** **> Settings > Wireless & networks > Bluetooth settings.**
2. Tap **Scan for devices.** Your BASE lutea will show all visible Bluetooth devices (in range) in its **Bluetooth devices.**
3. Select the device you want to pair with.
4. If required, enter your PIN and tap **OK.**

If a PIN is required, the same PIN should be entered on the other device.

Making the Most of Multimedia

Taking pictures, making and watching videos, recording memos and playing your favorite tunes, or maybe just listening to the radio while looking at your holiday snaps … Whatever you like doing, the BASE lutea is a little multimedia marvel. Here's how to make the very most of it.

Taking Pictures with Your Camera

Your phone has a 5.0 megapixel camera. Open it by tapping **Home Key >** **> Camera.**

Aim the camera at the subject and then tap to take a shot. To view it, just tap the picture in the right corner of the screen. Or select **Menu Key > Gallery** to view all your pictures.

Adjusting Camera Settings

From the Camera Screen tap **Menu Key > Settings.** These are the options you'll get:

- **White balance:** Enables the camera to capture colors more accurately by adjusting to the available light.
- **Anti-Banding:** Avoid stripes on pictures you take of TV or computer screens.
- **Color effect:** Select a picture effect.
- **Store location:** Record where the picture was taken.
- **Select ISO:** Set the ISO level or put it on automatic. (The higher the ISO the better for taking pictures in low light conditions.)
- **Picture size:** Change the size of the pictures you've taken.
- **Picture quality:** Adjust the jpeg quality.
- **Focus mode:** Turn autofocus on/off.
- **Sharpness:** Adjust picture sharpness.
- **Contrast:** Adjust the contrast. (A higher contrast makes it easier to see blue, red or green against black.)
- **Saturation:** Tap to adjust the saturation.
- **Restore to default settings**

TIP: To change quickly from camera to camcorder or vice versa, use the switch icon .

Shooting Video with Your Camcorder

Open the camcorder by tapping **> Camcorder.** Then select to start shooting, and to stop. Select the picture in the right corner of the screen to view the video you've just shot. Or tap **Menu Key > Gallery** to see all your video clips.

Adjusting Your Video Settings

By tapping **Menu Key > Settings** from the Camcorder Screen, you can adjust the video settings. These are the options you'll be given:

- **Video quality**
- **Video Encoder**
- **Audio Encoder**
- **Video duration**
- **Restore to default settings**

Listening to Your FM Radio

The FM Radio on your phone lets you search for, listen to and save radio channels. And when you get a call, the radio will automatically switch off.

To tune in, plug your headset into your phone. Tap **> FM Radio.** The icon will pop up in the status bar.

Tap or to scan for available FM channels. If you need to fine-tune the radio's reception, tap **Menu Key > Adjust.** Select / to make the frequency go up or down by +/– 0.1 MHz.

Once you're happy that you've got the best reception possible, hold the frequency shown until a red box appears on the screen, and then drag it into the box to save – as shown in the following diagram.

IMPORTANT: The quality of your radio's reception depends on the coverage of the radio station where you are. The wired headset that comes with the BASE lutea works as an antenna, so always connect the headset when using the FM Radio.

- Press **Volume Keys** to adjust the volume.
- Tap **Menu Key > Sleep** to set the FM radio sleep timer.
- Tap to switch off the radio.

Playing Your Music

You can play digital audio files from your phone's memory card in Music.

1. Tap **> Music** to open the Music Screen.
2. Select **Artists/Albums/Songs/Playlists** to see the songs you want to play.
3. Tap a song from the list to start playing.
4. Adjust the **Volume Keys** up or down.

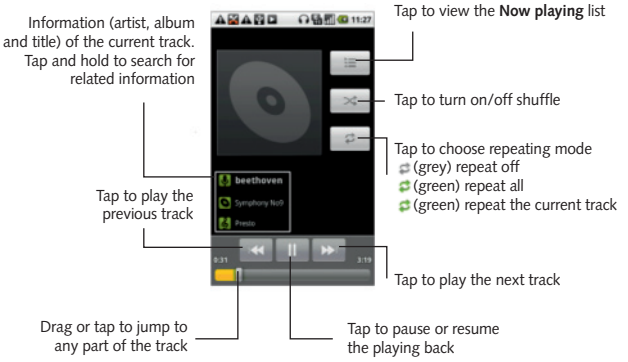
Information (artist, album and title) of the current track. Tap and hold to search for related information
Tap to view the **Now playing** list
Tap to turn on/off shuffle
Tap to choose repeating mode
(grey) repeat off
(green) repeat all
(green) repeat the current track
Tap to play the previous track
Tap to play the next track
Drag or tap to jump to any part of the track
Tap to pause or resume the playing back
beethoven
Symphony No9
Presto
11:27
0:31
3:19

Creating Playlists

Playlists help you organize your music files:

1. Select a music file you want to add to a new playlist.
2. Tap and hold on the file until a shortcut menu pops up.
3. Tap **Add to playlist.**
4. Tap **New.**
5. Type the playlist name and tap **Save.**

Managing Playlists

1. From the Music Screen tap **Playlists** to see them all.
2. Hold on the playlist you want to play or edit until a shortcut menu pops up. Tap **Play, Delete** or **Rename.**

Adding a Song to a Playlist

1. Open the folder where the song is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Add to playlist.**
4. Select a playlist.

Setting a Song as Ringtone

1. Open the folder where the song is.
2. Hold on the song until a shortcut menu pops up.
3. Select **Use as phone ringtone.**

TIP: Listening to a song that you'd like as a ringtone? Just tap **Menu Key > Use as ringtone.** Job done.

Playing Your Videos

First, you need to copy video files to your memory card. Then, to play a video file, tap **Home Key >** **> Videos.** This will open the Videos Screen and show the video files saved to your memory card.

Choose a video file and the video player will open. Tap on the screen and the control bar will appear as below. So now you can play, pause, fast forward, etc.

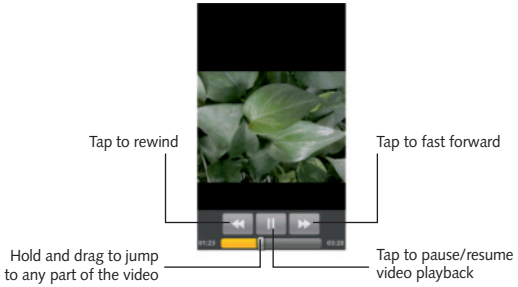

Opening Your Gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact icons, and sharing with friends.

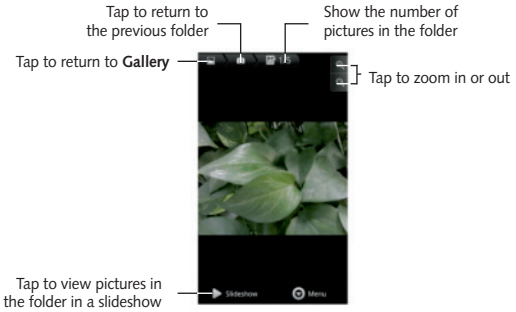
Tap to return to the previous folder
Show the number of pictures in the folder
Tap to return to **Gallery**
Tap to zoom in or out
Tap to view pictures in the folder in a slideshow
Slideshow
Menu

Making Memorable Memos

With Sound Recorder you can record voice memos – or, if you're feeling creative, make your own ringtones … as long as you've installed a memory card in your BASE lutea.

1. Tap **Home Key >** **> Sound Recorder.**
2. Make sure your mouth is near the phone's microphone.
3. Tap to start recording … and say something. Or get someone – or something else – to make some sounds worth recording.
4. Tap to stop recording.
5. Tap to play back the voice recording.
6. Tap **OK** to save the voice recording, or tap **Discard** if it's not up to your high standards and you want to try again.

TIP: Where are your recordings? You'll find them by going to **Home Key >** **> Music > Playlists > My recordings.** And if you'd like to use a recording as a ringtone, hold the recording and when the shortcut menu pops up, select **Use as phone ringtone.**

Using Your Google™ Applications

Signing in to your Google Account lets you synchronize Google Mail, Calendar, and Contacts between your phone and the web. And if you don't have an account, you can easily create one.

1. Tap a Google application, such as **Market.**
2. Read the instructions and select **Next.**
3. If you've got a Google account, tap **Sign in**. Enter your username and password. Then tap **Sign in**. (Or tap **Create** if you don't have a Google account.)

Google Mail

Google Mail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Google Mail on your phone is automatically synchronized with your Google Mail account on the web.

This is how you create and send an email:

1. Open **Google Mail** by tapping **> Google Mail.**
2. Press **Menu Key.** Then select **Compose.**

3. Enter the email address of the person you're contacting in the "To" field. If you're sending the email to several people, separate the email addresses with a comma. You can add as many recipients as you want.
4. Enter the email subject, and then write your email.
5. Tap **Send.**

Sorting Out Your Phone Settings

Setting Time and Date

1. Tap **Home Key > Menu Key > Settings > Date & time.**
2. Clear the **Automatic** tick box if you want to set the time and date by yourself.
3. Tap **Set date.** Adjust the date, and tap **Set** to save it.
4. Tap **Select time zone** and tap where you are in the world.
5. Tap **Set time**. Adjust the time, and tap **Set** to save it.
6. Tap the tick box behind **Use 24-hour format** if you want to change the time format.

7. Tap **Select date format** to select the one you prefer.

Changing Display Settings

By tapping **Home Key > Menu Key > Settings > Sound & display**, you can adjust the display settings as you like – changing **Orientation, Animation, Brightness,** and **Screen timeout.**

Adjusting Screen Brightness

1. Select **Brightness** from the display settings.
2. Adjust and tap **OK.**

Adjusting Screen Timeout

When not in use, your phone will turn the screen off after a set length of time. If that time is too long or short, you can adjust it.

1. Tap **Screen timeout** from the display settings.
2. Select your preferred time from the list.

Switching Screen Orientation Automatically

You can select to switch your screen orientation to landscape or portrait automatically when rotating your phone. Simply tick the **Orientation** box from the display settings.

And when you want to disable this function, just clear the **Orientation** tick box.

Showing an Animation when Opening/Closing Windows

1. Tap **Animation** in the display settings.
2. Select the animation type you like.

When you want to disable this function, select **No animations.**

Sound Settings

By tapping **Home Key > Menu Key > Settings > Sound & display**, you can adjust the sound settings, such as ringtones and alerts.

Choosing Your Ringtone

1. Tap **Phone ringtone** in sound settings.
2. Select the ringtone you want to use from the pop-up list.

Setting the Default Notification Ringtone

1. Select **Notification ringtone** from the **Sound & display** settings.
2. Scroll through the ringtone list and select one as the default notification ringtone.
3. Tap **OK** to save.

Switching Your Phone to Silent

1. In the **Sound & display** settings tick the **Silent mode** box.
2. You can also switch to **Silent mode** by holding the **Volume Key** (down) or – if the screen is locked – by dragging the **Sound off** bar to the left, as shown below.

The silent icon will appear in the status bar.

Switching to Vibrate

In **Sound & display** tick the **Phone vibrate** box. If your phone is already in **Silent mode**, the vibration icon will appear in the status bar.

"Haptic" (Touch) Keypad Feedback

If you'd like your phone to vibrate in response to your key touch, then you need to turn on the haptic (touch) feedback.

1. Tap **Home Key >** **> Settings > Sound & display.**
2. Tick the **Haptic feedback** box.

Adjusting Ringer Volume

1. Make sure your phone isn't in **Silent mode.**
2. Select **Ringer volume** from **Sound & display.**
3. Adjust the ringer volume and tap **OK** to save.

TIP: You can adjust the ringer volume quickly by pressing **Volume Keys** from any screen. And if you'd like to adjust the notification volume together with the ringer volume, tick the **Use incoming call volume for notifications** box.

Adjusting Media Volume

The media volume for **Music, FM Radio** and **Videos** is adjusted like this:

1. Select **Media volume** from **Sound & display.**
2. Adjust the media volume and tap **OK** to save.

Turning on Touch Tones

To make your phone play tones whenever you touch the keys, tick the **Audible touch tones** box in **Sound & display.**

Turning on Selection Tones

Tick the **Audible selection** box in **Sound & display** to set your phone to play a sound when you touch the screen to make a selection.

Turning on SD Card Audible Alerts

If you like audible as well as visual alerts, you can set your phone to play a sound whenever a microSD card notification appears in the status bar. Simply tick the **SD card notifications** box in the **Sound & display** settings.

Language Settings

You can change the language of your phone's operating system in two simple steps …

1. Tap **> Settings > Language & keyboard > Select locale.**
2. Select a language from the list given.

Mobile Network Services

Both GSM and WCDMA are supported by your phone. You can configure the network settings according to your phone service.

Getting Data Services while Abroad

1. Tap **> Settings > Wireless & networks > Mobile networks.**
2. Tick the **Data roaming** box.

Disabling Data Services

1. Tap **> Settings > Wireless & networks.**
2. Clear the **Mobile network** tick box.

Switching Network Modes

1. Tap **> Settings > Wireless & networks > Mobile networks > Network mode.**
2. Select one of the following: **GSM/WCDMA auto, WCDMA only**, or **GSM only.**

Switching Networks

1. Tap **> Settings > Wireless & networks > Mobile networks > Network operators.**
2. Tap **Search networks** to set the network manually, or tap **Select automatically.**

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact your service provider to find out more.

1. Tap **Home Key > > Settings > Wireless & networks > Mobile networks > Access Point Names.**
2. Tap **Menu Key > New APN.**
3. Set the necessary parameters. (See how to add a GPRS/3G/EDGE connection on page 88.)
4. Tap **Menu Key > Save**.

Security Settings

Here's how to protect your phone and SIM from unauthorized use.

Protecting Your Phone with a Screen Unlock Pattern

Creating Your Screen Unlock Pattern

1. Tap **Home Key >** **> Settings > Location & security > Set unlock pattern.**
2. Read the instructions and tap **Next.**
3. Watch the example pattern and tap **Next.**
4. With a finger, draw your own pattern and tap **Continue.**
5. Draw the pattern again and tap **Confirm.**
6. Press the **Power Key** to lock the screen.

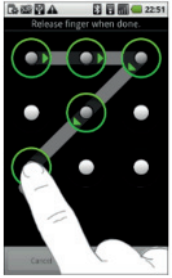

Unlocking the Screen with Your Pattern

1. Press the **Power Key.**
2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

Protecting Your SIM with a PIN

Every SIM card comes with a PIN. The initial PIN is provided by your service provider. It's best to lock your SIM as soon as you can.

1. Tap **> Settings > Location & security > Set up SIM/RUIM card lock.**
2. Select the **Enable/disable SIM PIN** check box.
3. Enter the PIN you've been given and tap **OK.**

Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Tap **Home Key > > Settings > Location & security > Set up SIM/RUIM card lock.**
2. Tap **Change SIM/RUIM PIN.**
3. Enter the old PIN and tap **OK.**
4. Enter your new PIN and tap **OK.**
5. Enter the new PIN again and tap **OK.**

Setting up Credential Storage

This lets you select applications to access secure certificates and other credentials.

Enabling Secure Credentials

1. Tap Home Key > **> Settings > Location & security.**
2. Tap **Set password** and create a password for the credential storage.
3. Tick the **Use secure credentials** box.

TIP: You can also install encrypted certificates from your microSD card by tapping **Install from SD card**.

Deleting Secure Credentials

1. Tap **> Settings > Location & security.**
2. Tap **Clear storage** to clear credentials.

Managing Your Memory Card

Checking Memory Card Space

Tap **Home Key >** **> Settings > SD card, USB mass storage & phone storage.**

You can view the space information from **Total space/Available space** in **SD card** section.

"Unmounting" Your Memory Card

Unmounting makes your memory card unavailable to the phone's operating system, and ready for removal or replacement.

1. Tap **Home Key >** **> Settings > SD card, USB mass storage & phone storage.**
2. Tap **Unmount SD card.**

The icon will appear in the status bar.

Formatting Your Memory Card

1. Unmount your memory card (as above).
2. Tap **Format SD card.**
3. Tap **Format SD card** to confirm.

Managing Phone Memory

Checking Available Storage Space

1. Tap **Home Key >** **> Settings > SD card, USB mass storage & phone storage.**
2. Scroll down to view the **Available space** in the **Internal phone storage** section.

Privacy: Reset to Factory Settings

1. Home Key > **> Settings > Privacy.**

2. Factory data reset.

3. Reset phone.

4. Erase everything.

Managing Applications and Their Settings

Viewing Your Phone's Applications

Tap **Home Key >** **> Settings > Applications > Manage applications.**

The applications installed in your phone will be listed.

Allowing Installation of Non-market Applications

1. Tap **Home Key >** **> Settings > Applications.**
2. Tick the **Unknown sources** box.

How to Install an Application

1. Tap **Home Key >** **> Filer,** and open the folder where the application you want to install is.
2. Tap the application to start installation.
3. Follow the instructions that come with the application to complete the set-up.

If you like, you can install an application from the Android Market (**Home Key >** **> Market**) by selecting an application and tapping **Install**. BUT please make sure you've chosen an application developed for your phone and processor type BEFORE installing it.

You can also install non-marketing applications – provided you've followed the instructions for "Allowing Installation of Non-market Applications" above.

Removing an Application

1. Tap **Home Key >** **> Settings > Applications > Manage applications.**
2. Select the application you want to bin.
3. Tap **Uninstall** and **OK** to confirm.

TIP: Market applications can also be removed by going to the **Downloads** page in **Market**, selecting the unwanted application, and tapping **Uninstall.**

Managing Other Settings

Search Settings

You can manage search settings and search history by tapping **Home Key >** **> Settings > Search.**

Google search settings

- **Show web suggestions:** Show suggestions from Google as you type.
- **Search history:** Show your search history from your Google account.
- **Manage search history:** Manage your search history from your Google account.

Searchable Items

When you search for an item on your phone, only the searchable items will be looked for. Tap **Home Key >** **> Settings > Search > Searchable items.**

Speech Synthesis

You can set the text-to-speech options by tapping **Home Key >** **> Settings > Text-to-speech.** But before you use this function, you need to make sure the voice data is installed.

Other Applications

Alarms

1. Tap **Home Key >** **> Alarm.**
2. Tap the default alarm set to configure it. Or, to create a new alarm, tap **Menu Key > Add alarm.**
3. Tick the **Turn on alarm** box and set up **Name, Time, Repeat, Snooze, Duration, Vibrate, Ringtone, Volume, Volume crescendo,** and **Delay.**

Docs To Go

A handy application suite that'll open Word, Excel, PowerPoint, or PDF files.

Read the on-screen instructions for detailed information.

Note Pad

Note pad is for your memos. Tap **Menu Key** to add or delete them. Hold an existing note to edit, delete it or change its title.

Calculator

Tap > **Calculator.**

TIP: Got some seriously fiddly formulae to sort out? Tap **Menu Key > Advanced panel** to use scientific calculation.

Calendar

Calendar is great for scheduling appointments, meetings and other events.
Tap **Home Key >** > **Calendar.**

SIM Toolkit

SIM Toolkit will only appear on the screen if your SIM provides this function. To use SIM services, insert your SIM in the phone first.

Tap **Home Key >** > **SIM Toolkit.**

Task Manager

Go to **Task Manager** to view or stop applications.

Stopwatch

1. Tap > **Stopwatch.**
2. Tap **Start** to start timing, **Pause** to pause time, and **Resume** to continue.
3. **Reset** will take the stopwatch back to 00.00.

Specifications

Dimensions		Approx. 114 mm × 56.5 mm × 11.8 mm
Weight		Approx. 130 g (with battery)
Bearer		GSM/WCDMA support
Main display dimension, resolution		3.5 Inches 800*480
Back camera	Sensor type	CMOS
	Still image capture resolution	5M pixels with auto focus
Internal memory		ROM: 512 MB, RAM: 512 MB
Removable memory card		Support microSD card, max. capacity 32 GB
Battery	Capacity	1250 mAh
	Standby time	Approx. 165 hours (subject to network status)
	Voice talk time	Approx. 240 min (subject to network status)
WAP browser version		WAP 2.0

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the BASE lutea manufactured by ZTE CORPORATION is in compliance with the Directive 2002/95/EC of the European Parliament – RoHS (Restriction of Hazardous Substances) – with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The BASE lutea, manufactured by ZTE CORPORATION, meets the requirements of EU 2002/95/EC.

Disposal of Your Old Appliance

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's Recycling Manual based on WEEE directive, please send an e-mail to weee@zte.com.cn, or visit the web site below to download the document: http://ensupport.zte.com.cn

EC Declaration Of Conformity CE 1588 !

It is hereby declared that following designated product:

Product Type: WCDMA/GSM (GPRS) Dual-Mode Digital Mobile Phone
Model No.: BASE ZTE-1001

complies with the essential protection requirements of the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) and the Electromagnetic Compatibility Directive (2004/108/EC).

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to the Radio and Telecommunication Terminal Equipment Directive (EC Directive 1999/5/EC) was performed by American TCB (Notified Body No. 1588), based on the following standards:

Safety	EN 60950-1:2006
EMC	EN 301 489-1 V1.8.1; EN 301 489-7 V1.3.1; EN 301 489-17 V1.3.2; EN 301 489-19 V1.2.1; EN 301 489-24 V1.4.1; EN 55013:2001+A2:2006 EN 55020:2007
Radio	EN 301 511 V9.0.2; EN 301 908-1 V3.2.1; EN 301 908-2 V3.2.1; EN 300 328 V1.7.1
Health	EN 50360:2001; EN 62209-1:2006; IEC 62209-2:2010; EN 50332-1:2001; EN 50332-2:2003

This declaration is the responsibility of the manufacturer:

ZTE Corporation
ZTE Plaza, Keji Road South, Hi-Tech Industrial Park, Nanshan District,
Shenzhen, Guangdong, 518057, P. R.China

Authorized person signing for the company:

Xu Feng Quality Director of ZTE Corporation

Name in printed letters & position in the company

Shenzhen, 18th October 2010

Place & date *Legally valid signature*

BASE